BenQ

LCD Monitor
User Manual
EW2430V
EW2730V

Downloaded from ManualMonitor.com Manuals

Copyright

Copyright © 2011 by BenQ Corporation. All rights reserved. No part of this publication may be reproduced, transmitted, transcribed, stored in a retrieval system or translated into any language or computer language, in any form or by any means, electronic, mechanical, magnetic, optical, chemical, manual or otherwise, without the prior written permission of BenQ Corporation.

Disclaimer

BenQ Corporation makes no representations or warranties, either expressed or implied, with respect to the contents hereof and specifically disclaims any warranties, merchantability or fitness for any particular purpose. Further, BenQ Corporation reserves the right to revise this publication and to make changes from time to time in the contents hereof without obligation of BenQ Corporation to notify any person of such revision or changes.

Please follow these safety instructions for best performance, and long life for your monitor.

Power Safety

- The AC plug isolates this equipment from the AC supply.
- The power supply cord serves as a power disconnect device for pluggable equipment. The socket outlet should be installed near the equipment and be easily accessible.
- This product should be operated from the type of power indicated on the marked label. If you are not sure of the type of power available, consult your dealer or local power company.
- An approved power cord greater or equal to H03VV-F or H05VV-F, 2G or 3G, 0.75mm2 must be used.

Care And Cleaning

- Cleaning. Always unplug your monitor from the wall outlet before cleaning. Clean the LCD monitor surface with a lint-free, non-abrasive cloth. Avoid using any liquid, aerosol or glass cleaners.
- Slots and openings on the back or top of the cabinet are for ventilation. They must not be blocked or covered. Your monitor should never be placed near or over a radiator or heat source, or in a built-in installation unless proper ventilation is provided.
- Never push objects or spill liquid of any kind into this product.

Servicing

Do not attempt to service this product yourself, as opening or removing covers may expose you to dangerous voltages or other risks. If any of the above mentioned misuse or other accident such as dropping or mishandling occurs, contact qualified service personnel for servicing.

Downloaded from ManualMonitor.com Manuals

Table of Contents

Copyright 2

Disclaimer 2

Getting started 4

Getting to know your monitor 6

- Front view 6
- Back view 6
- Connection 7

Getting to know the remote control (EW2730V only) 8

- Front view 8
- Installing the battery 9

How to assemble your monitor hardware 10

- How to detach the stand base 15
- Using the monitor wall mounting kit 16

Getting the most from your BenQ monitor 17

- How to install the monitor on a new computer 18
- How to upgrade the monitor on an existing computer 19
- How to install on Windows 7 system 20
- How to install on Windows Vista systems 21
- How to install on Windows XP system 22

Picture optimization 23

How to adjust your monitor 24

- The control panel 24
- Hot key mode 25
- Main menu mode 26

Troubleshooting 42

- Frequently asked questions (FAQ) 42
- Need more help? 44

Downloaded from ManualMonitor.com Manuals

1. Getting started

When unpacking please check you have the following items. If any are missing or damaged, please contact the place of purchase for a replacement.

BenQ LCD Monitor	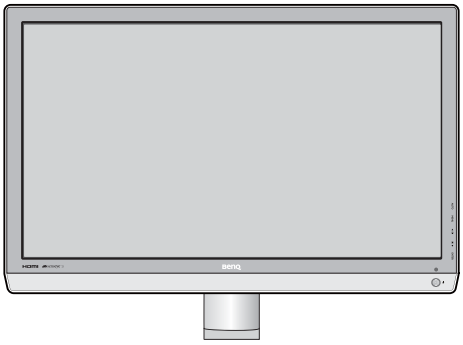
Monitor Base	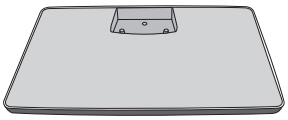
Quick Start Guide	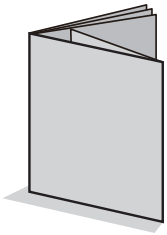
CD-ROM	
Remote Control (EW2730V only)	
Power Cord (Picture may differ from product supplied for your region.)	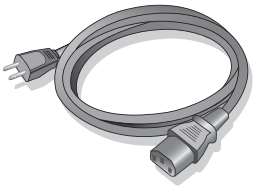
Video Cable: D-Sub	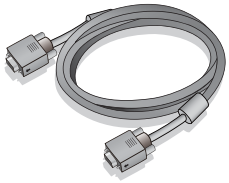

Downloaded from ManualMonitor.com Manuals

Audio Cable	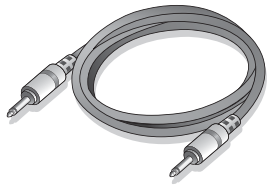
Audio cable: RCA (L/R)	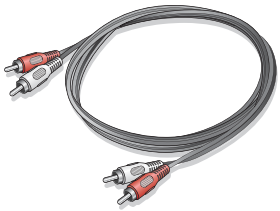
USB Cable	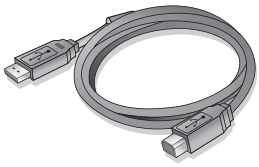
Video Cable: DVI-D (Optional accessory for models with DVI inputs, sold separately)	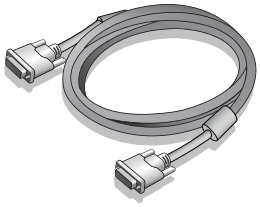
Video Cable: HDMI (Optional accessory for models with HDMI inputs, sold separately)	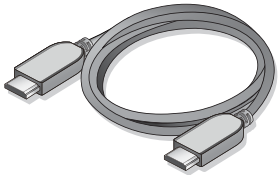
Video Cable: Component (Optional accessory for models with Component inputs, sold separately)	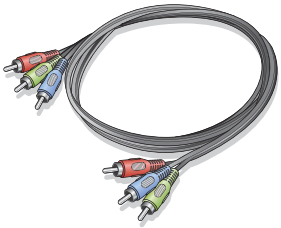

Consider keeping the box and packaging in storage for use in the future when you may need to transport the monitor. The fitted foam packing is ideal for protecting the monitor during transport.

Always keep the product and accessories out of reach of small children.

Downloaded from ManualMonitor.com Manuals

2. Getting to know your monitor

Front view

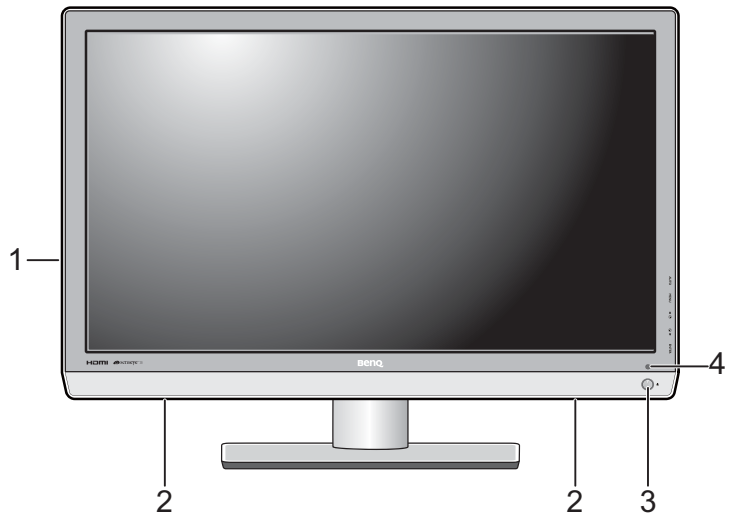

1. USB port x 4 (downstream; connecting to USB devices)
2. Speakers
3. Power button
4. Remote control sensor (EW2730V only)

Back view

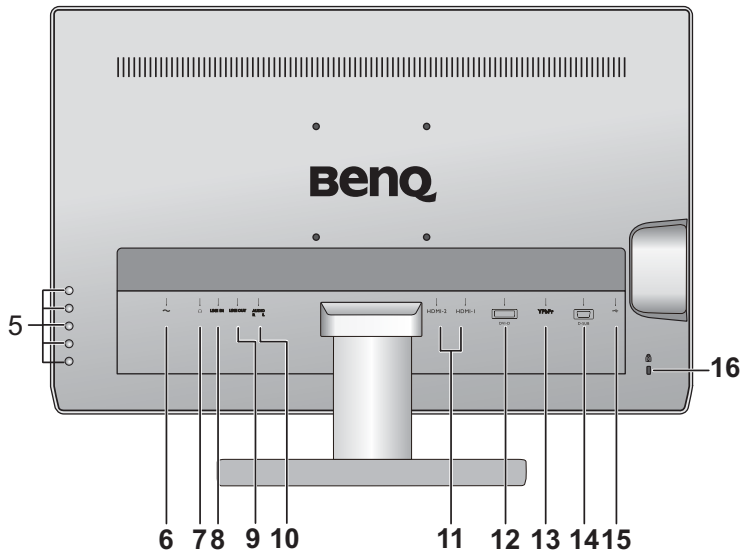

5. Control buttons
6. AC Power Input jack
7. Headphone jack
8. Audio Line In
9. Audio Line Out
10. Audio input jacks (L/R)
11. HDMI socket x 2
12. DVI-D socket
13. Component input sockets (YPbPr)
14. D-Sub socket
15. USB port x 1 (upstream; connecting to the PC)
16. Kensington lock slot

☞ Above diagram may vary depending on the model.

Downloaded from ManualMonitor.com Manuals

Connection

The following connection illustrations are for your reference only. For cables that are not supplied with your product, you can purchase them separately.

For detailed connection methods, see page 11 - 13.

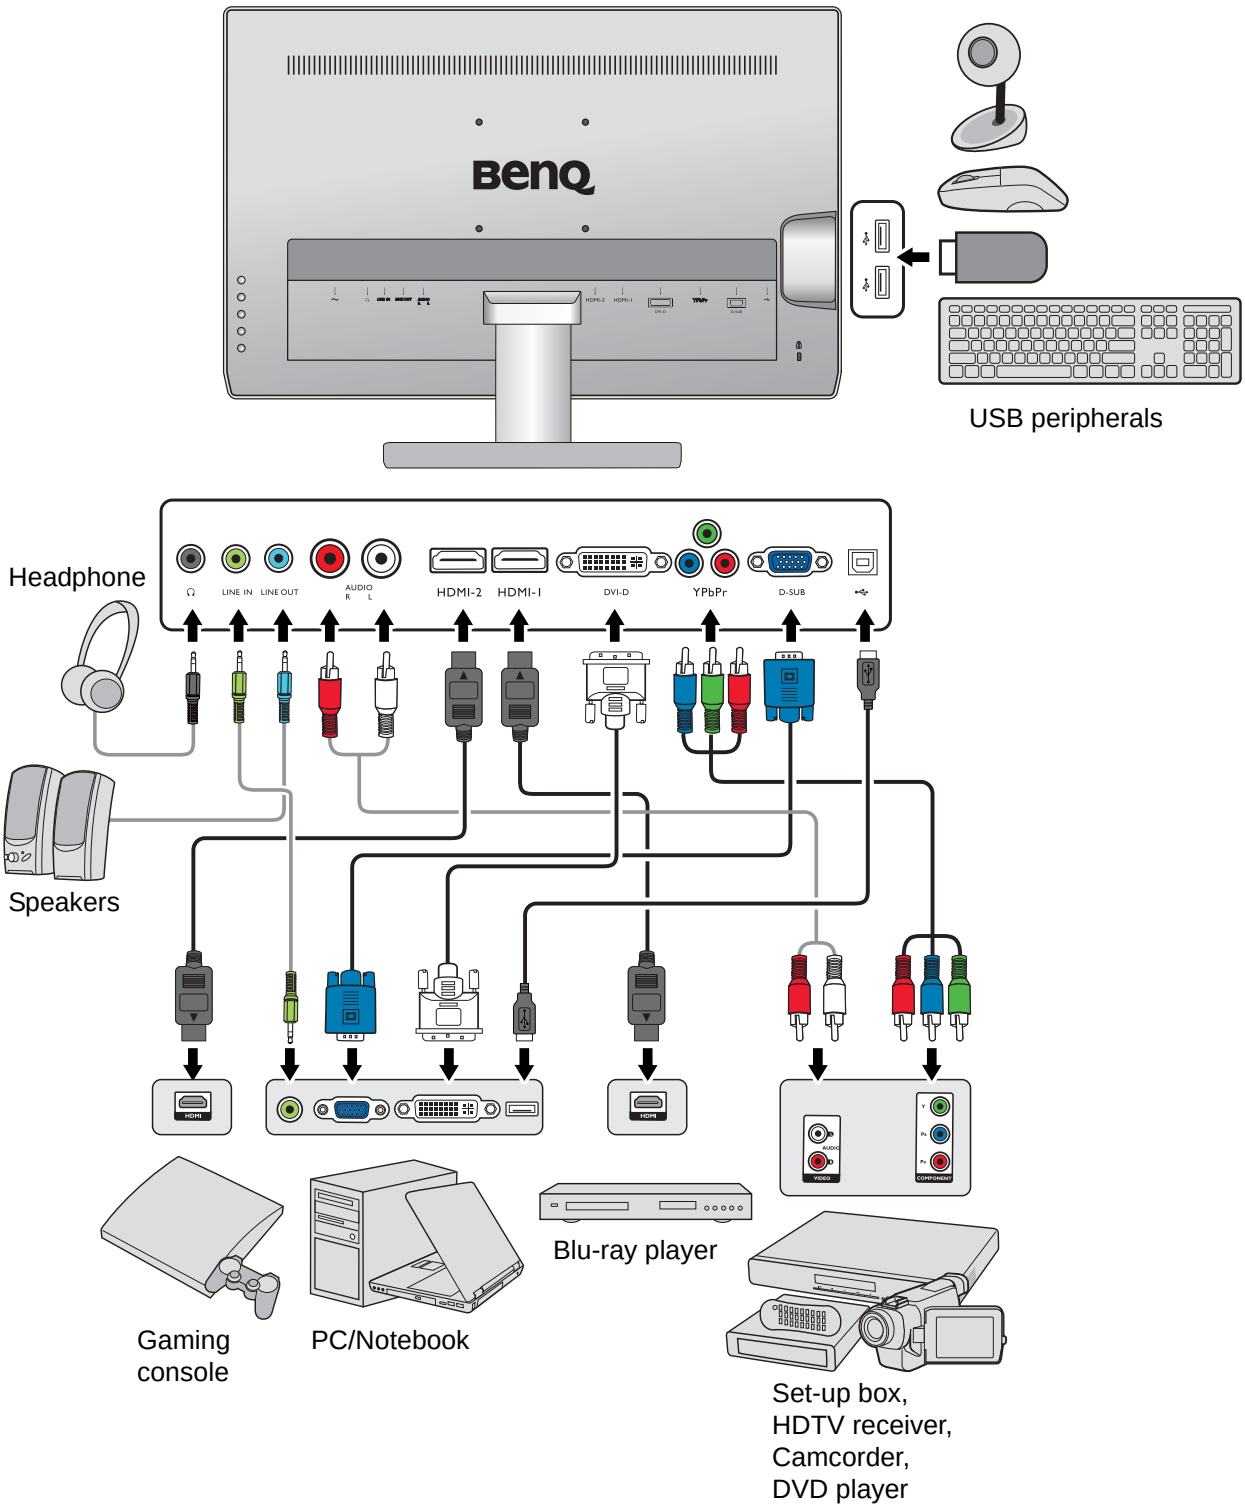

Downloaded from ManualMonitor.com Manuals

3. Getting to know the remote control (EW2730V only)

Front view

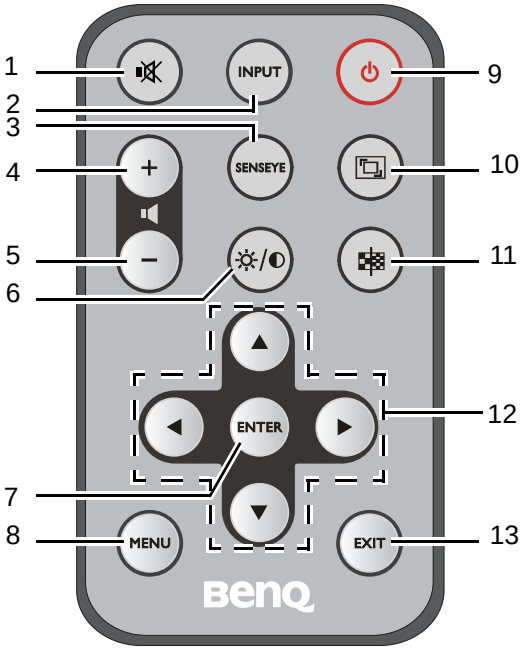

1. Mute button	Mutes the volume.
2. Input source button	Switches between different video signals that may be connected to your monitor.
3. Senseye mode button	Switches to different Senseye modes.
4. Volume up button	Increases the volume.
5. Volume down button	Decreases the volume.
6. Brightness/Contrast button	•Adjusts the balance between light and dark shades. •Adjusts the degree of difference between darkness and lightness.
7. Enter button	Enters sub menu and select items.
8. Menu button	Activates OSD main menu and return to the previous menu.
9. Power button	Turns the power on or off.
10. Smart focus button	Turns the Smart focus on or off.
11. Super resolution button	Turns the Super resolution on or off.
12. Navigation buttons	Adjusts settings or moves to different sub menus.
13. Exit button	Exits OSD.

OSD = On Screen Display.

Downloaded from ManualMonitor.com Manuals

Installing the battery

1. **Turn over the remote control. Remove the battery cover as illustrated.**

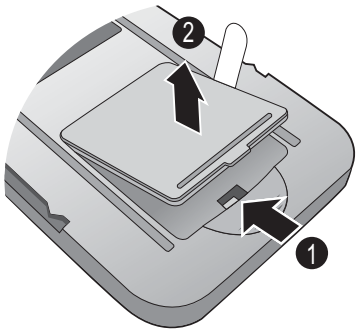

2. **Remove the battery insulation sheet.**

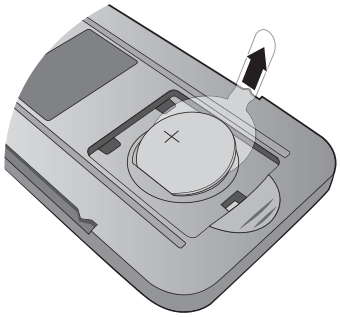

3. **Replace the provided battery onto the battery holder properly. Make sure that the positive terminal (+) faces upward.**

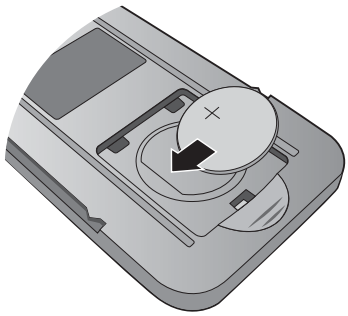

4. **Replace the battery cover.**

   The remote control is ready to use now.

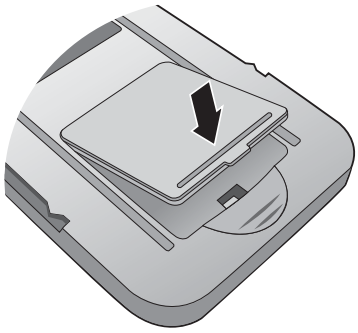

Downloaded from ManualMonitor.com Manuals

4. How to assemble your monitor hardware

☞ If the computer is turned on you must turn it off before continuing.
Do not plug-in or turn-on the power to the monitor until instructed to do so.

1. **Attach the monitor base.**

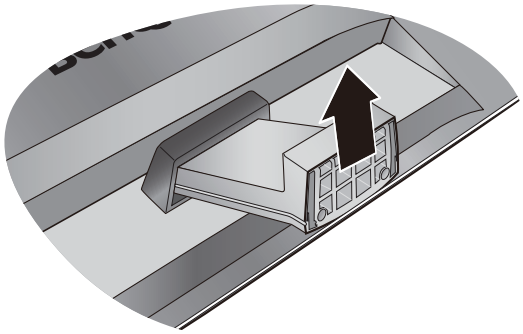

☞ Please be careful to prevent damage to the monitor. Placing the screen surface on an object like a stapler or a mouse will crack the glass or damage the LCD substrate voiding your warranty. Sliding or scraping the monitor around on your desk will scratch or damage the monitor surround and controls.

Protect the monitor and screen by clearing a flat open area on your desk and placing a soft item like the monitor packaging bag on the desk for padding.

Gently lay the screen face down on a flat clean padded surface.

While holding the monitor firmly against the desk, pull the monitor stand arm upwards clear of the monitor.

Orient and align the stand base socket with the end of the stand arm, then push them together.

Tighten the thumbscrew on the bottom of the monitor base as illustrated.

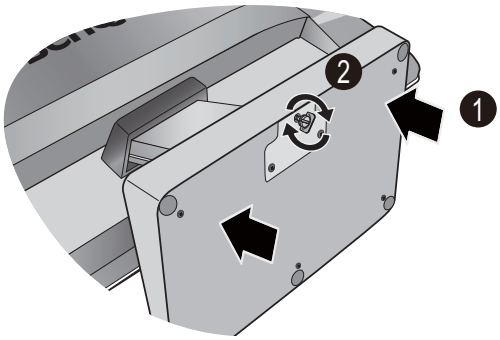

Gently attempt to pull them back apart to check that they have properly engaged.

Carefully lift the monitor, turn it over and place it upright on its stand on a flat even surface.

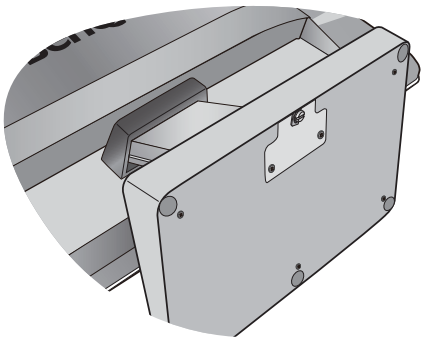

Downloaded from ManualMonitor.com Manuals

You should position the monitor and angle the screen to minimize unwanted reflections from other light sources.

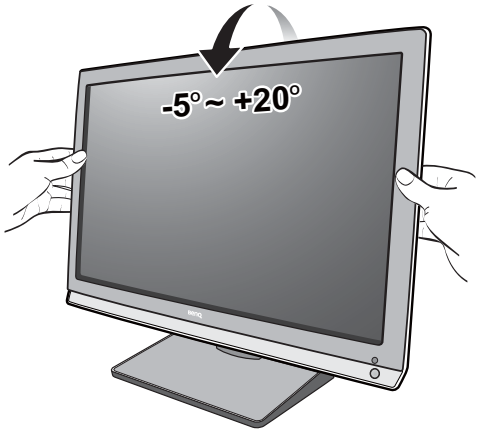

2. Connect the video cable.

To Connect the D-Sub Cable

Connect the plug of the D-Sub cable (at the end without the ferrite filter) to the monitor video socket. Connect the other end of the cable (at the end with the ferrite filter) to the computer video socket.

Tighten all finger screws to prevent the plugs from accidently falling out during use.

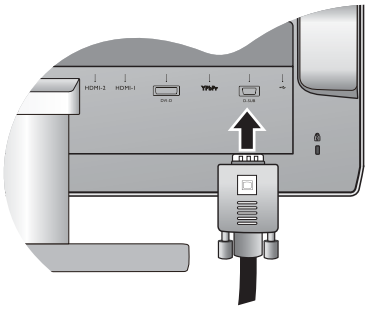

To Connect the DVI-D Cable

Connect the plug of the DVI-D cable (at the end without the ferrite filter) to the monitor video socket. Connect the other end of the cable (at the end with the ferrite filter) to the computer video socket.

Tighten all finger screws to prevent the plugs from accidently falling out during use.

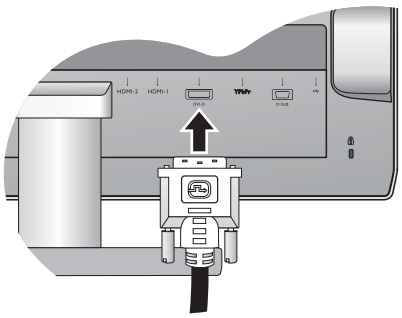

To Connect the HDMI Cable

Connect the plug of the HDMI cable to one of the two HDMI ports on the monitor.

Connect the other end of the cable to the HDMI port of a digital output device.

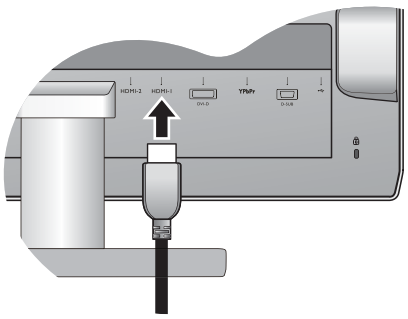

To Connect the Component Cable

Connect the plugs of the Component cable to the Component video inputs on the monitor. The plugs are in green, blue, and red respectively. Ensure that the colors of the plugs and the terminals match when making the connection.

Connect the other end of the cable to the Component ports of the video output device.

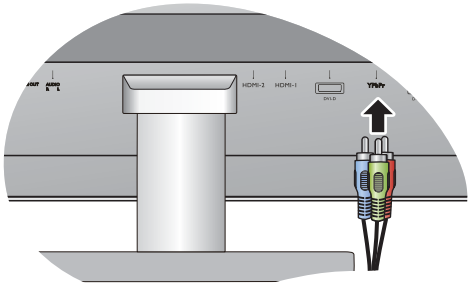

Downloaded from ManualMonitor.com Manuals

☞ The video cable included in your package and the socket illustrations on the right may vary depending on the LCD model.

If there is more than one video transmission method available to you, you might want to take the picture quality of each video cable into consideration before making the connection.

- Best quality: HDMI / DVI-D
- Better quality: D-Sub
- Good quality: Component

3. Connect the audio cable.

<u>To Input Audio Signals</u>

Connect the provided audio cable between the socket on the rear of the monitor (Line In) and your computer audio outlet.

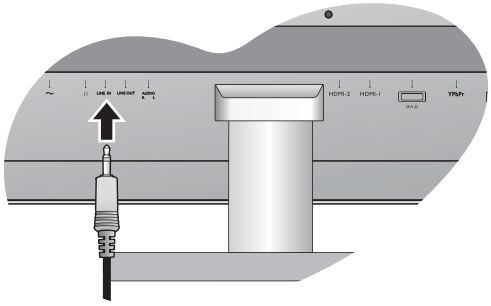

If the video source is Component, connect the corresponding audio output of your output device to the AUDIO input terminals (L/R) on the monitor using the RCA (L/R) audio cable. The plugs used for audio transmission are in white and red. Make sure that the colors of the Audio plugs and the terminals match when making the connection.

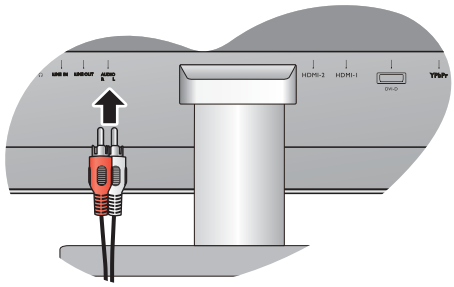

Connect the other end of the Audio cable to the Audio ports of the video output device.

To check the available audio inputs that go with each video source, see **Video sources and the available audio inputs on page 35**.

<u>To Output Audio Signals</u>

You are provided with the following options to output audio from the monitor:

- You may connect headphones to the headphone jack found on the back side of the monitor. See picture on the right.

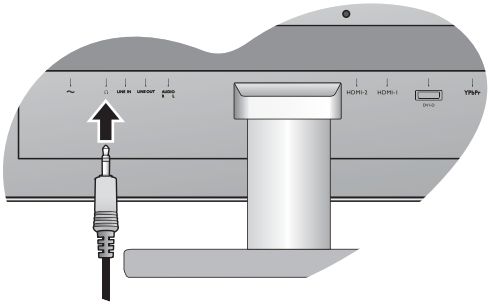

- If you prefer using external speakers, please also use another audio cable (usually supplied with the speakers) to connect the monitor (Line Out) to the input/Line In jack of the speaker.

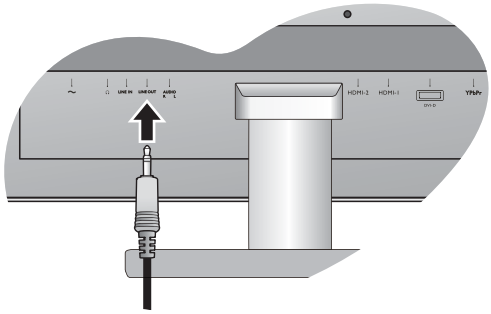

Downloaded from ManualMonitor.com Manuals

- Or you can output audio using the built-in speakers on the monitor.

☞ The output priority of the audio signals detected on your monitor is headphone jack, Line Out socket, and the built-in speakers. Your monitor scans for available sockets and outputs audio signals in this order if audio cables are connected properly.

⚠ A headphone should be connected to the headphone jack only; connection to other jacks may cause damage to the headphone. If you prefer to output the audio signals to external speakers or other sound systems, use Audio Line Out on the monitor.

4. Connect USB Devices.

I. Connect the USB cable between the PC and the monitor (via the upstream USB port at the back). This upstream USB port transmits data between the PC and the USB devices connected to the monitor.

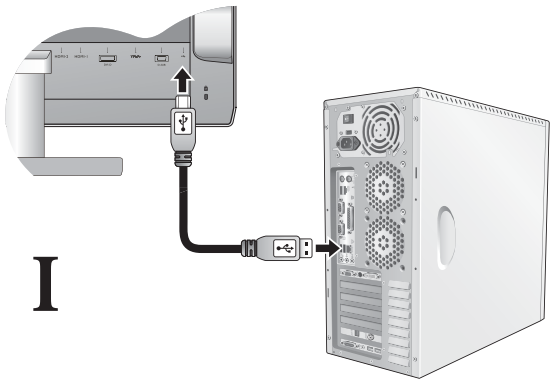

II. Connect USB devices via other USB ports (downstream) on the monitor. These downstream USB ports transmit data between connected USB devices and the upstream port.

See picture on the right.

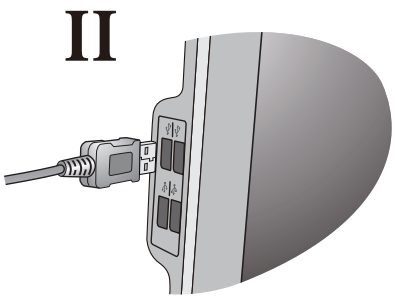

5. Connect the power cable to the monitor.

Plug one end of the power cord into the socket labelled ~ on the rear of the monitor. Do not connect the other end to a power outlet just yet.

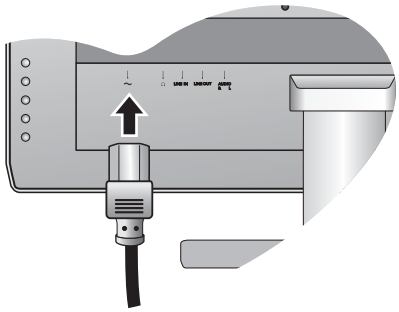

Downloaded from ManualMonitor.com Manuals

6. Connect-to and turn-on the power.

Plug the other end of the power cord into a power outlet and turn it on.

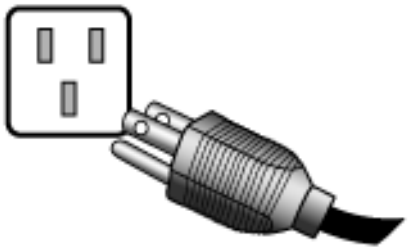

☞ Picture may differ from product supplied for your region.

Turn on the monitor by pressing the power key.

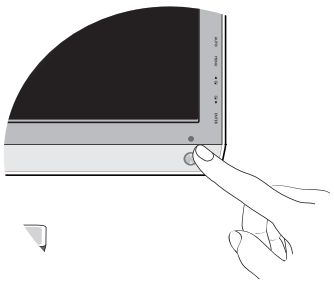

Turn on the computer too, and follow the instructions in Getting the most from your BenQ monitor on page 17 to install the monitor software.

To extend the service life of the product, we recommend that you use your computer's power management function.

Downloaded from ManualMonitor.com Manuals

How to detach the stand base

1. **Prepare the monitor and area.**
   Turn off the monitor and the power before unplugging the power cable. Turn off the computer before unplugging the monitor signal cable.

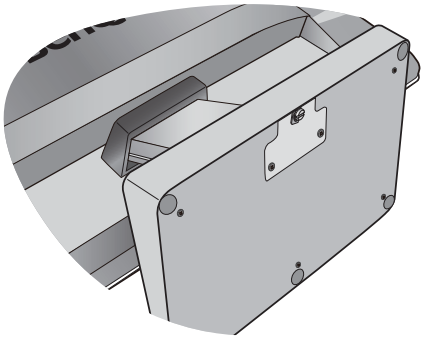

☞ Protect the monitor and screen by clearing a flat open area on your desk and placing a soft item like a towel on the desk for padding, before laying the screen face down on a flat clean padded surface.

2. **Release the thumbscrew on the bottom of the monitor base and detach the monitor base as illustrated.**

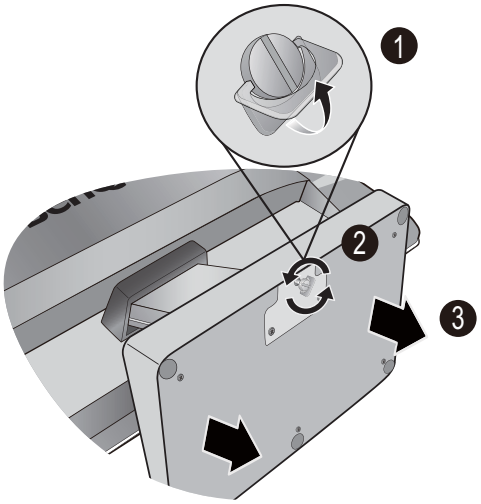

Downloaded from ManualMonitor.com Manuals

Using the monitor wall mounting kit

The back of your LCD monitor has a VESA standard mount with 100mm pattern, allowing the installation of a wall mount bracket. Before starting to install a monitor wall mounting kit, please read the precautions carefully.

Precautions:

- Install your monitor and monitor mounting kit on a wall with flat surface.
- Ensure that the wall material is stable to support the weight of the monitor.
- Turn off the monitor and the power before disconnecting the cables from the LCD monitor.

1. **Remove the monitor base.**
   Lay the screen face down on a clean and well-padded surface.

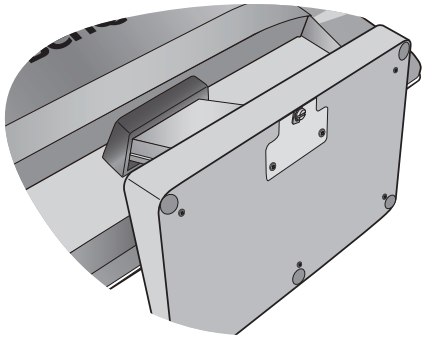

2. **Remove the monitor stand.**
   Slightly push the hinge cap on the upper part of the monitor stand toward the monitor as illustrated. The cap shall be released.

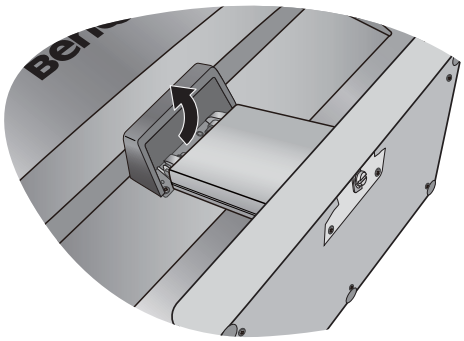

   Use a a cross-pointed screwdriver to release the screws that fixing the monitor stand to the monitor. The use of a magnetic-head screwdriver is recommended to avoid of losing the screws.

   Then pull the monitor stand backward away from the monitor.

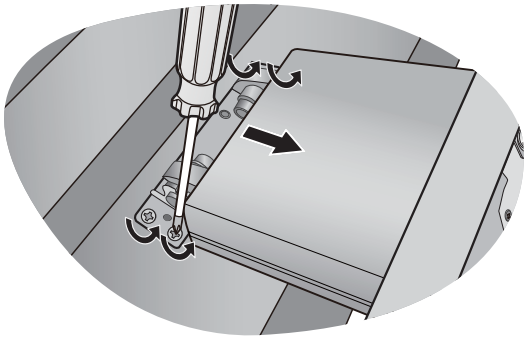

☞ In case you intend to use your monitor on the stand in the future, please keep the monitor base, monitor stand, and screws somewhere safe for future use.

3. **Follow the instruction manuals of the wall mount bracket you purchased to complete the installation.**

Downloaded from ManualMonitor.com Manuals

5. Getting the most from your BenQ monitor

To gain the most benefit from your new BenQ color LCD flat screen monitor, you should install the custom BenQ LCD Monitor driver software as provided on the BenQ LCD Monitor CD-ROM.

The circumstances under which you connect and install your BenQ LCD Monitor will determine which process you need to follow to successfully install the BenQ LCD Monitor driver software. These circumstances relate to which version of Microsoft Windows you are using, and whether you are connecting the monitor and installing the software onto a new computer (without existing monitor driver software), or whether you are upgrading an existing installation (which already has existing monitor driver software) with a newer monitor.

In either case however, the very next time you turn on your computer (after connecting the monitor to your computer), Windows will automatically recognize the new (or different) hardware, and will launch its **Found New Hardware Wizard**.

Follow the wizard instructions until it asks you to select a monitor model. At that point, click the **Have Disk** button, insert the BenQ LCD Monitor CD-ROM and select the appropriate monitor model. Further details and step-by-step instructions for either an automatic (new) or upgrade (existing) installation, see:

- How to install the monitor on a new computer on page 18.
- How to upgrade the monitor on an existing computer on page 19.

☞
- If you require a User Name and Password to login to your Windows computer, you must be logged on as an Administrator or as a member of the Administrators group in order to install the monitor driver software. Furthermore, if your computer is connected to a network which has security access requirements, network policy settings may prevent you from installing software on your computer.
- To check the name of the purchased model, refer to the specification label on the back of the monitor.

Downloaded from ManualMonitor.com Manuals

How to install the monitor on a new computer

This instruction details the procedure for selecting and installing the BenQ LCD Monitor driver software on a new computer which has never had a monitor driver installed before. This instruction is only suitable for a computer which has never been used before, and for which the BenQ LCD Monitor is the first ever monitor to be connected to it.

☞ If you are adding the BenQ LCD Monitor to an existing computer that has already had another monitor connected to it (and has monitor driver software installed), you should not be following these instructions. You should instead be following the instructions for How to upgrade the monitor on an existing computer.

1. Follow the instructions in How to assemble your monitor hardware on page 10.
   When Windows starts, it will automatically detect the new monitor and launch the **Found New Hardware Wizard**. Follow the prompts until it displays the option to **Install Hardware Device Drivers**.
2. Insert the BenQ LCD Monitor CD-ROM into a CD drive on the computer.
3. Check **Search for a suitable driver for my device** option, and click **Next**.
4. Check the option for CD-ROM drives (uncheck all others) and click **Next**.
5. Look to confirm that the wizard has selected the correct name of your monitor and click **Next**.
6. Click **Finish**.
7. Restart the computer.

Downloaded from ManualMonitor.com Manuals

How to upgrade the monitor on an existing computer

This instruction details the procedure for manually updating the existing monitor driver software on your Microsoft Windows computer. It is currently tested as compatible for Windows XP, Windows Vista, and Windows 7 Operating System (OS).

☞ The BenQ LCD Monitor driver for your model may well function perfectly with other versions of Windows, however, as at the time of writing, BenQ has done no testing of this driver on other versions of Windows and cannot guarantee its operation on those systems.

Installing monitor driver software involves selecting an appropriate information file (.inf) on the BenQ LCD Monitor CD-ROM for the particular model monitor you have connected, and letting Windows install the corresponding driver files from the CD. You need only steer it in the right direction. Windows has an Upgrade Device Driver Wizard to automate the task and guide you through the file selection and installation process.

See:

- How to install on Windows 7 system on page 20.
- How to install on Windows Vista systems on page 21.
- How to install on Windows XP system on page 22.

Downloaded from ManualMonitor.com Manuals

How to install on Windows 7 system

1. Open **Display Properties**.

   Go to **Start**, **Control Panel**, **Hardware and Sound**, **Devices and Printers** and right-click the name of your monitor from the menu.

   Alternatively, right-click the desktop and select **Personalize**, **Display**, **Devices and Printers**, and right-click the name of your monitor from the menu.

2. Select **Properties** from the menu.
3. Click the **Hardware** tab.
4. Click **Generic PnP Monitor**, and then the **Properties** button.
5. Click the **Driver** tab and the **Update Driver** button.
6. Insert the BenQ LCD Monitor CD-ROM into a CD drive on the computer.
7. In the **Update Driver Software** window, select the option **Browse my computer for driver software**.
8. Click **Browse** and navigate to the following directory: d:\BenQ_LCD\Driver\ (where d is the drive letter designator for the CD-ROM drive).

☞ The drive letter for your CD drive may differ from the example above depending upon your system - it may be 'D:' or 'E:' or 'F:' etc.

9. Select the correct folder name of your monitor from provided driver list, and click **Next**.

   This will copy and install the appropriate monitor driver files to your computer.

10. Click **Close**.

    You may be prompted to restart your computer after the driver update is complete.

Downloaded from ManualMonitor.com Manuals

How to install on Windows Vista systems

1. Open **Display Settings**.

   Right-click the desktop and select **Personalize** from the popup menu.

   Select **Display Settings** from the **Personalize appearance and sounds** window.

   The **Display Settings** window will display.

2. Click the **Advanced Settings** button.

   The **Generic PnP Monitor Properties** window will display.

3. Click the **Monitor** tab and the **Properties** button.

4. Click **Continue** in the prompted **User Account Control** window.

5. Click the **Driver** tab and the **Update Driver** button.

6. Insert the BenQ LCD Monitor CD-ROM into a CD drive on the computer.

7. In the **Update Driver Software** window, select the option **Browse my computer for driver software**.

8. Click **Browse** and navigate to the following directory: d:\BenQ_LCD\Driver\ (where d is the drive letter designator for the CD-ROM drive).

☞ The drive letter for your CD drive may differ from the example above depending upon your system – it may be ‘D:’ or ‘E:’ or ‘F:’ etc.

9. Select the correct folder name of your monitor from provided driver list, and click **Next**.

   This will copy and install the appropriate monitor driver files to your computer.

10. Click **Close**.

    You may be prompted to restart your computer after the driver update is complete.

Downloaded from ManualMonitor.com Manuals

How to install on Windows XP system

1. Open **Display Properties**.
   The quickest shortcut to **Display Properties** is through the Windows desktop.

   Right-click the desktop and select **Properties** from the popup menu.

   Alternatively, the Windows menu to **Display Properties** is located in **Control Panel**.

   In Windows XP version, Control Panel is located directly under the main **Start** menu item.

   The menu options displayed will depend upon which type of view is selected for your system.

   - Under the Classic view, click **Start**, **Control Panel**, and **Display**.
   - Under the Category view, click **Start**, **Control Panel**, **Appearance and Themes**, **Change the screen resolution**.

   The **Display Properties** window will display.

2. Click the **Settings** tab and the **Advanced** button.
   The **Advanced Display Properties** window will display.

3. Click the **Monitor** tab and select the **Plug and Play Monitor** from the list.
   If there is only one monitor in the list, it will already be selected for you.

4. Click the **Properties** button.
   The **Monitor Properties** window will display.

   If the driver provider is listed as BenQ, and the model matches that of your new monitor, the proper drivers are already installed, and you need do nothing further. Cancel out of these property windows. However, if BenQ is not listed as the manufacturer, or the correct model is not currently shown, you will need to continue with these instructions.

5. Click the **Driver** tab and the **Update Driver** button.
   The **Hardware Update Wizard** will display. Follow the wizard instructions noting the steps below:

6. Insert the BenQ LCD Monitor CD-ROM into a CD drive on the computer you attached the monitor to.

7. Check the option **Install from a list or specific location** and click **Next**.

8. Check the option **Search for the best driver in these locations** and also check **Search removable media**, then click **Next**.

   Please wait while the wizard searches for drives and the BenQ LCD Monitor CD inserted in step 6. When completes, the wizard should have found and selected the BenQ driver on the CD appropriate to your monitor model.

9. Select (single-click) the correct name of your monitor from provided driver list on the CD, and click the **Next** button.

   This will copy and install the appropriate monitor driver files to your computer.

10. Click **Finish**.

    This will close the wizard and return you to the **Monitor Properties** window.

11. Click **Close**, **OK**, and **OK**.

    This will close the **Display Properties** windows. You may be prompted to restart your computer after the driver update is complete.

Downloaded from ManualMonitor.com Manuals

6. Picture optimization

The easiest way to obtain an optimal display from an analog (D-Sub) input is to use the **AUTO** key function. Press the **AUTO** key to optimize the currently displayed image to the screen.

☞ When you connect a digital video output using a digital (DVI or HDMI) cable to your monitor, the **AUTO** key and the Auto Adjustment function will be disabled, because the monitor will automatically display the best image.

Please ensure that the connected graphic card on your computer is set to the native resolution of the monitor when you use the AUTO key function.

If you wish, you can always adjust the screen geometric settings manually using geometry menu items. To assist you in this endeavour, BenQ has provided a screen test image utility which you can use to check for screen color, grayscale and line gradient display.

1. Run the test program auto.exe from CD-ROM. You could also use any other image, such as the desktop of your operating system. However, we recommend that you use auto.exe. As you run auto.exe, a test pattern displays.
2. Press the **AUTO** key on the monitor.
3. Press the **MENU** key to access the monitor On-Screen Display (OSD) menu.
4. Use the ▲ or ▼ keys to select **DISPLAY** and press the **ENTER** key to enter the menu.
5. If you notice a vertical noise (like a curtain effect-shimmering of vertical lines), press the ▲ or ▼ keys to select **Pixel Clock** and press the **ENTER** key. Then press the ▲ or ▼ keys to adjust the monitor until the noise disappears.
6. If you notice a horizontal noise, press the ▲ or ▼ keys to select **Phase** and press the **ENTER** key. Then press the ▲ or ▼ keys to adjust the monitor until the noise disappears.

Downloaded from ManualMonitor.com Manuals

7. How to adjust your monitor

The control panel

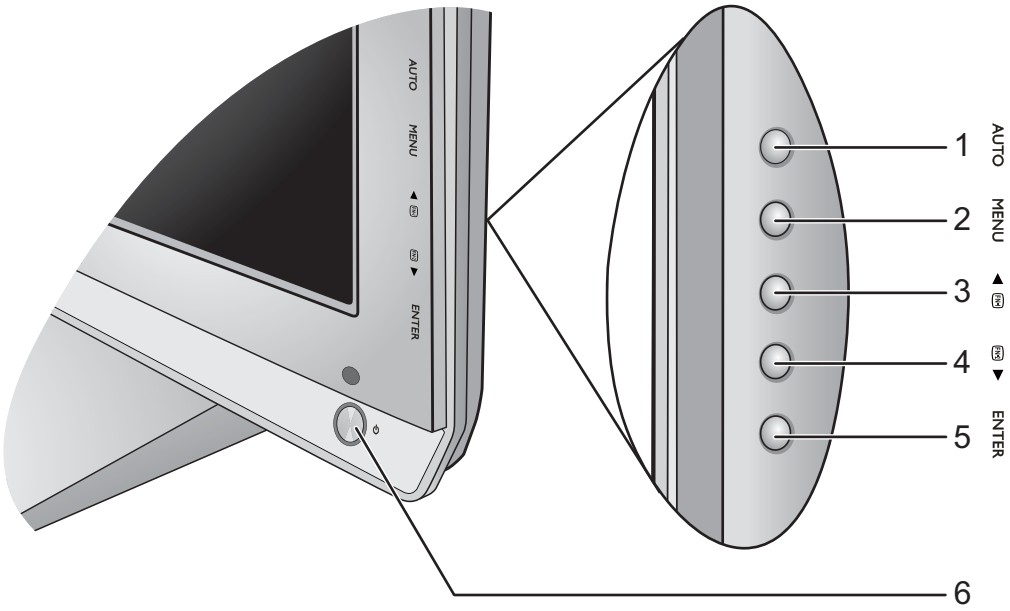

1. **AUTO**: Adjusts vertical position, phase, horizontal position and pixel clock automatically.
2. **MENU** key: Activates OSD main menu and return to the previous menu or exit OSD.
3. ▲/Custom key 1: For Up/Increase adjustment. By default, the key is the hot key for **Volume**. To change the default settings, see Custom key 1 on page 40 for more information.
4. ▼/Custom key 2: For Down/Decrease adjustment. By default, the key is the hot key for **Display mode**. To change the default settings, see Custom key 2 on page 40 for more information.
5. **ENTER** key: Enters sub menus and select items. This key is also the hot key for **Input**.
6. **Power**: Turns the power on or off.

OSD = On Screen Display.
The hot keys will display a graduated scale for adjusting the value of that setting, and will only operate while the OSD menu is not currently displaying. Hot key displays will disappear after a few seconds of no key activity. See **Hot key mode on page 25**.

Downloaded from ManualMonitor.com Manuals

Hot key mode

The monitor keys perform as hot keys to provide direct access to particular functions whenever the menu isn't currently displaying on-screen.

Custom key 1

Press the ▲ key to display the functions that can be accessed by this key. Press the ▲ or ▼ keys to change the settings if needed.
To change the default settings, see Custom key 1 on page 40 for more information.

By default, the key is the hot key for Volume. Press the ▲ key to display the **Volume** indicators. Further press the ▲ key will increase the volume, while the ▼ key will decrease the volume.

Custom key 2

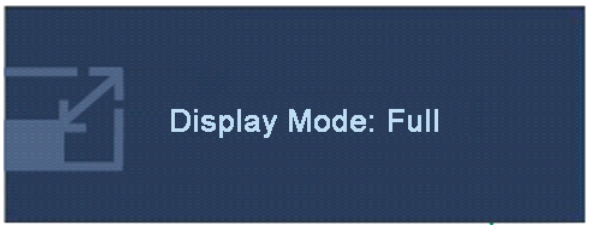

Press the ▲ key to display the functions that can be accessed by this key. Press the ▲ or ▼ keys to change the settings if needed.
To change the default settings, see Custom key 2 on page 40 for more information.

By default, the key is the hot key for **Display mod**e. Press the ▼ key continually to switch among **Full**, **Aspect**, and **1:1**. The setting will take effect immediately.
See also Display Mode on page 32.

Input hot key

Press the **ENTER** key to toggle between different PC video signal inputs that may be connected to your monitor.
The setting will take effect immediately.
See also Input on page 38.

Downloaded from ManualMonitor.com Manuals

Main menu mode

You can use the OSD (On Screen Display) menu to adjust all the settings on your monitor.

Available menu options may vary depending on the input sources, functions and settings. Menu options that are not available will become grayed out.

Press the **MENU** key to display the following main OSD menu.

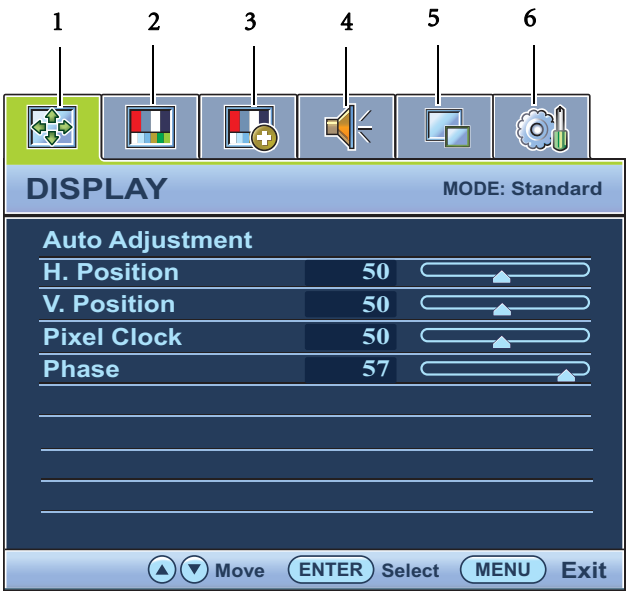

There are 6 main OSD menus:

1. Display
2. Picture
3. Picture Advanced
4. Audio
5. PIP/PBP
6. System

Use the ▲ (up) or ▼ (down) keys to highlight a menu item, and press the **ENTER** key to enter the Menu item settings.

The OSD menu languages may differ from the product supplied to your region, see **Language on page 39** under “OSD Settings” for more details.

For more information on each menu, please refer to the following pages:

- Display menu on page 27
- Picture menu on page 29
- Picture Advanced menu on page 31
- Audio menu on page 34
- PIP/PBP menu on page 36
- System menu on page 38

Downloaded from ManualMonitor.com Manuals

Display menu

Available menu options may vary depending on the input sources, functions and settings. Menu options that are not available will become grayed out.

1. Press the **MENU** key to display the main menu.
2. Press the ▲ or ▼ keys to select **DISPLAY** and then press the **ENTER** key to enter the menu.
3. Press the ▲ or ▼ keys to move the highlight to a menu item and then press the **ENTER** key to select that item.
4. Press the ▲ or ▼ keys to make adjustments or selections.
5. To return to the previous menu, press the **MENU** button.

Item	Function	Operation	Range
Auto Adjustment	Optimizes and adjusts the screen settings automatically for you. The **AUTO** key is a 'hot key' for this function. ☞ When you connect a digital video output using a digital (DVI or HDMI) cable to your monitor, the AUTO key and the **Auto Adjustment** function will be disabled.	Press the **ENTER** key to select this option and make adjustment.	

Downloaded from ManualMonitor.com Manuals

H. Position	Adjusts the horizontal position of the screen image.	Press the ▲ or ▼ keys to adjust the value.	0 to 100
V. Position	Adjusts the vertical position of the screen image.		0 to 100
Pixel Clock	Adjusts the pixel clock frequency timing to synchronize with the analog input video signal. Not applicable to a digital input signal. See also: Picture optimization on page 23.		0 to 100
Phase	Adjusts the pixel clock phase timing to synchronize with the analog input video signal. Not applicable to a digital input signal. See also: Picture optimization on page 23.		0 to 63

Downloaded from ManualMonitor.com Manuals

Picture menu

Available menu options may vary depending on the input sources, functions and settings. Menu options that are not available will become grayed out.

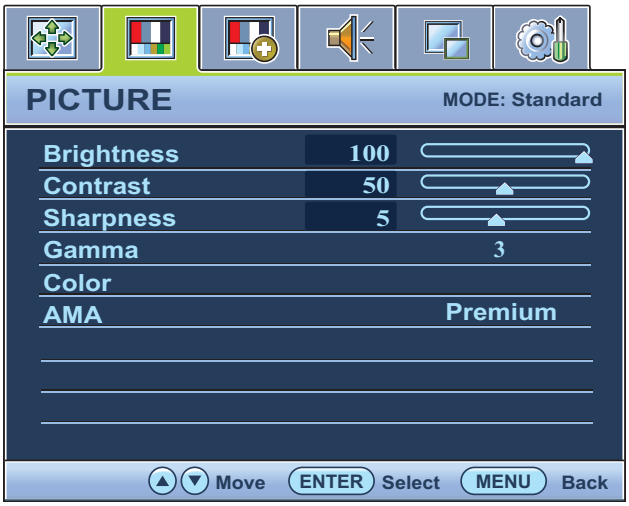

1. Press the **MENU** key to display the main menu.
2. Press the ▲ or ▼ keys to select **PICTURE** and then press the **ENTER** key to enter the menu.
3. Press the ▲ or ▼ keys to move the highlight to a menu item and then press the **ENTER** key to select that item.
4. Press the ▲ or ▼ keys to make adjustments or selections.
5. To return to the previous menu, press the **MENU** button.

Item	Function	Operation	Range
Brightness	Adjusts the balance between light and dark shades.	Press the ▲ key to increase the brightness and press the ▼ key to decrease the brightness.	0 to 100
Contrast	Adjusts the degree of difference between darkness and lightness.	Press the ▲ key to increase the contrast and press the ▼ key to decrease the contrast.	0 to 100
Sharpness	Adjusts the clarity and visibility of the edges of the subjects in the image.	Press the ▲ key to improve the crispness of the display and press the ▼ key to have softness effect on the display.	1 to 10
Gamma	Adjusts the tone luminance. The default value is 3 (the standard value for Windows).	Press the ▲ key to increase the gamma value (tone becomes darker) and press the ▼ key to decrease the gamma value (tone becomes lighter).	1 ~ 5

Downloaded from ManualMonitor.com Manuals

Color - Press **ENTER** to enter the Color menu.			
Color Temperature	Normal: Allows video and still photographs to be viewed with natural coloring. This is the factory default color.	Press the ▲ or ▼ keys to select this option.	
	Bluish: Applies a cool tint to the image and is factory pre-set to the PC industry standard white color.		
	Reddish: Applies a warm tint to the image and is factory pre-set to the news print standard white color.		
	User Mode: The blend of the Red, Green and Blue primary colors can be altered to change the color tint of the image. Go to the succeeding **Red**, **Green**, and **Blue** menus to change the settings.	Press the ▲ or ▼ keys and the **ENTER** key to select **Red**, **Green**, or **Blue**. Then use the ▲ or ▼ keys to make the color adjustments.	
Red	Tailors the image color tint. Decreasing one or more of the colors will reduce their respective influence on the color tint of the image. (e.g. if you reduce the Blue level the image will gradually take on a yellowish tint. If you reduce Green, the image will become a magenta tint.)	Press the ▲ or ▼ keys to adjust the value.	0 to 100
Green			
Blue			
Hue	Adjusts the degree of how we perceive colors.	Press the ▲ or ▼ keys to adjust the value.	0 to 100
Saturation	Adjusts the purity degree of colors.	Press the ▲ or ▼ keys to adjust the value.	0 to 100
Reset Color	Resets the custom color settings to the factory defaults.	Press the ▲ or ▼ keys to change the settings.	• YES • NO
Press **MENU** to leave the Color menu.			
AMA	Improves the gray level response time of the LCD panel.	Press the ▲ or ▼ keys to change the settings.	• Premium • High • OFF

Downloaded from ManualMonitor.com Manuals

Picture Advanced menu

Available menu options may vary depending on the input sources, functions and settings. Menu options that are not available will become grayed out.

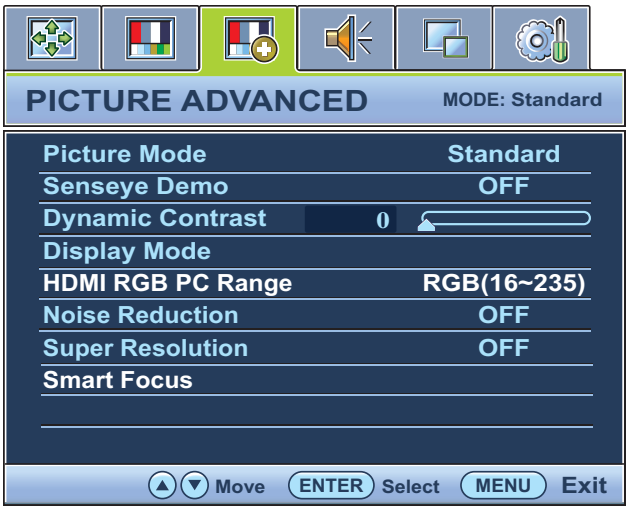

1. Press the **MENU** key to display the main menu.
2. Press the ▲ or ▼ keys to select **PICTURE ADVANCED** and then press the **ENTER** key to enter the menu.
3. Press the ▲ or ▼ keys to move the highlight to a menu item and then press the **ENTER** key to select that item.
4. Press the ▲ or ▼ keys to make adjustments or selections.
5. To return to the previous menu, press the **MENU** button.

Item	Function	Operation	Range
Picture Mode	Selects a picture mode that best suits the type of images shown on the screen. • Standard - for basic PC application. • Movie - for viewing videos. • Game - for playing video games. • Photo - for viewing still images. • sRGB - for better color matching representation with the peripheral devices, such as printers, DSCs, etc. • Eco - for saving electricity with low power consumption by providing minimum brightness for all running programs.	Press the ▲ or ▼ keys to change the settings.	• Standard • Movie • Game • Photo • sRGB • Eco

Downloaded from ManualMonitor.com Manuals

Senseye Demo	Displays the preview of screen images under the selected mode from Picture Mode. The screen will be divided into two windows; the left window demonstrates images of Standard mode, while the right window presents the images under the specified mode.	Press the ▲ or ▼ keys to change the settings.	• ON • OFF
Dynamic Contrast	The function is to automatically detect the distribution of an input visual signal, and then to create the optimal contrast.	Press the **ENTER** key to select this option. Press the ▲ or ▼ keys to change the settings.	0 to 5
Display Mode	This feature is provided to allow aspect ratio's other than 16:9 to be displayed without geometric distortion. • Overscan -Slightly enlarges the input image. Use this feature to hide annoying edge noise if present around your image. • Full - Scales the input image to fill the screen. Ideal for 16:9 aspect images. • Aspect - The input image is displayed without geometric distortion filling as much of the display as possible. 16:9 images will fill the screen horizontally while 4:3 images will fill the screen vertically. • 1:1 - Displays the input image in its native resolution without scaling	Press the ▲ or ▼ keys to change the settings. ☞ The options under Display Mode will be different depending on the input signal sources. For example, Aspect and 1:1 are not available for a 1366 x 768 resolution.	• Overscan • Full • Aspect • 1:1
HDMI RGB PC Range	Determines the range of color scales. Select an option that matches the RGB range setting on the connected HDMI device.	Press the **ENTER** key to select this option. Press the ▲ or ▼ keys to change the settings.	• RGB (0 ~ 255) • RGB (16 ~ 235)

Downloaded from ManualMonitor.com Manuals

Noise Reduction	Reduces noise from signal to improve the picture quality.	Press the **ENTER** key to select this option. Press the ▲ or ▼ keys to change the settings.	• OFF • Low • Medium • High
Super Resolution	Simulates high-resolution images by increasing pixel density of low-resolution ones.	Press the **ENTER** key to select this option. Press the ▲ or ▼ keys to change the settings.	• ON • OFF • Demo
Smart Focus	This feature provides a highlight area to focus on certain content, e.g. a YouTube video or an online game. • Size: Determines the size of the highlight area.	Press the **ENTER** key to select this option. Press the ▲ or ▼ keys to change the settings.	• Small • Large • OFF
	• H. Position: Adjusts the horizontal position of the highlight area. • V. Position: Adjusts the vertical position of the highlight area. • Scaling: scales the highlight area.	Press the **ENTER** key to select this option. Press the ▲ or ▼ keys to change the settings.	0 to 100

Downloaded from ManualMonitor.com Manuals

Audio menu

Available menu options may vary depending on the input sources, functions and settings. Menu options that are not available will become grayed out.

1. Press the **MENU** key to display the main menu.
2. Press the ▲ or ▼ keys to select **AUDIO** and then press the **ENTER** key to enter the menu.
3. Press the ▲ or ▼ keys to move the highlight to a menu item and then press the **ENTER** key to select that item.
4. Press the ▲ or ▼ keys to make adjustments or selections.
5. To return to the previous menu, press the **MENU** button.

Item	Function	Operation	Range
Volume	Adjusts the audio volume.	Press the ▲ key to increase the volume and press the ▼ key to decrease the volume.	0 ~ 100
Mute	Mutes the audio input.	Press the ▲ or ▼ keys to change the settings.	• ON • OFF
Audio Select	Allow users to select the audio source or let the monitor detect it automatically.	Press the ▲ or ▼ keys to change the settings.	• PC Audio • HDMI Audio 1 • HDMI Audio 2 • Component Audio • Auto Detect

Downloaded from ManualMonitor.com Manuals

Video sources and the available audio inputs

Depending on the input video sources, the available audio inputs may vary. Video sources and the available audio inputs are as follows:

	Available audio selection				
Inputs	PC Audio (Line In)	HDMI Audio 1	HDMI Audio 2	Component Audio (L/R)	Auto Detect
D-Sub (VGA)	V			V	V
DVI-D	V			V	V
HDMI 1	V	V		V	V
HDMI 2	V		V	V	V
Component	V			V	V

You may also want to know the recommended audio input for each video source:

Video source	Recommended audio input
D-Sub (VGA)	PC Audio (Line In)
DVI-D	PC Audio (Line In)
HDMI	HDMI
Component	Component Audio (L/R)

Downloaded from ManualMonitor.com Manuals

PIP/PBP menu

Available menu options may vary depending on the input sources, functions and settings. Menu options that are not available will become grayed out.

1. Press the **MENU** key to display the main menu.
2. Press the ▲ or ▼ keys to select **PIP/PBP** and then press the **ENTER** key to enter the menu.
3. Press the ▲ or ▼ keys to move the highlight to a menu item and then press the **ENTER** key to select that item.
4. Press the ▲ or ▼ keys to make adjustments or selections.
5. To return to the previous menu, press the **MENU** button.

Item	Function	Operation	Range
Mode	Sets the PIP or PBP mode. Pictures from two independent video sources (as one is analog and the other is digital) are displayed on the screen at the same time. • PIP: the Picture-in-Picture (PIP) mode displays the main video source on the screen while the second source in an inset window. • PBP: Allows to display images from two different video sources side-by-side. • SWAP: videos from the main and the second sources are swapped on the screen. ☞ The audio input is from the main source if the PIP/PBP mode is activated.	Press the ▲ or ▼ keys to change the settings.	• PIP • PBP • SWAP • OFF

Downloaded from ManualMonitor.com Manuals

PIP/PBP Source	Sets the second video source for the PIP/PBP mode.	Press the ▲ or ▼ keys to change the settings.	• VGA • DVI-D • HDMI 1 • HDMI 2 • Component
PIP Size	Determines the size of the inset window in the PIP mode.	Press the ▲ or ▼ keys to change the settings.	• Small • Medium • Large
H. Position	Adjusts the horizontal position of the inset window in the PIP mode.	Press the ▲ or ▼ keys to change the settings.	0 to 100
V. Position	Adjusts the vertical position of the inset window in the PIP mode.		0 to 100
Contrast	Adjusts the contrast of the inset window in the PIP/PBP mode.	Press the ▲ or ▼ keys to change the settings.	0 to 100
Sharpness	Adjusts the sharpness of the inset window in the PIP/PBP mode.	☞ To adjust the contrast and the sharpness of the main source, go to the PICTURE menu. See **page 29** for more information.	1 to 10

Video source selection in PIP/PBP mode

If Source Auto Search (**page 41**) is turned on, your monitor scans for the available video sources in the following order: VGA, DVI-D, HDMI 1, HDMI 2, and Component, and displays the first available one. This video source will become the main source in PIP/PBP mode. You will need to decide the second source for PIP/PBP mode from the menu in **PIP/PBP Source on page 37**. Menu options that are not available will become grayed out.

Refer to the following table to find your main source and its supporting second sources.

		Possible second sources				
	Inputs	VGA	DVI-D	HDMI 1	HDMI 2	Component
Main source	VGA		V	V	V	
	DVI-D	V		V	V	V
	HDMI 1	V	V			V
	HDMI 2	V	V			V
	Component		V	V	V	

Downloaded from ManualMonitor.com Manuals

System menu

Available menu options may vary depending on the input sources, functions and settings. Menu options that are not available will become grayed out.

1. Press the **MENU** key to display the main menu.
2. Press the ▲ or ▼ keys to select **SYSTEM** and then press the **ENTER** key to enter the menu.
3. Press the ▲ or ▼ keys to move the highlight to a menu item and then press the **ENTER** key to select that item.
4. Press the ▲ or ▼ keys to make adjustments or selections.
5. To return to the previous menu, press the **MENU** button.

Item	Function	Operation	Range
Input	Use this to change the input to that appropriate to your video cable connection type.	Press the ▲ or ▼ keys to change the settings.	• D-sub (VGA) • DVI • HDMI 1 • HDMI 2 • Component

Downloaded from ManualMonitor.com Manuals

OSD Settings - Press **ENTER** to enter the **OSD Settings** menu.			
Language	Sets the OSD menu language.	Press the ▲ or ▼ keys to change the settings. ☞ The language options displayed on your OSD may differ from those shown on the right, depending on the product supplied in your region.	• English • French • German • Italian • Spanish • Polish • Japanese • Czech • Traditional Chinese • Hungarian • Simplified Chinese • Serbo-Croatian • Romanian • Dutch • Russian • Swedish • Portuguese
H. Position	Adjusts the horizontal position of the OSD menu.	Press the ▲ or ▼ keys to change the settings.	0 to 100
V. Position	Adjusts the vertical position of the OSD menu.		0 to 100
Display Time	Adjusts the display time of the OSD menu.		• 5 Sec. • 10 Sec. • 15 Sec. • 20 Sec. • 25 Sec. • 30 Sec.

Downloaded from ManualMonitor.com Manuals

OSD Lock	Prevents all the monitor settings from being accidentally changed. When this function is activated, the OSD controls and hotkey operations will be disabled.	Press the ▲ or ▼ keys to change the settings. ☞ To unlock the OSD controls when the OSD is preset to be locked, press and hold the "MENU" key for 15 seconds to enter the "OSD Lock" option and make changes. Alternatively, you may use the ▲ or ▼ keys to select "NO" in the "OSD Lock" submenu from the "OSD Settings" menu, and all OSD controls will be accessible.	• YES • NO
Press **MENU** to leave the **OSD Settings** menu.			
Custom key 1	Sets the function to be accessed by the custom key.	Press the **ENTER** key to select this option. Press the ▲ or ▼ keys to move the highlight to a menu item and then press the **ENTER** key to select that item.	• Picture mode • PIP / PBP • Display mode • Volume • Mute • Brightness • Contrast • Super Resolution • Smart Focus
Custom key 2	Sets the function to be accessed by the custom key.	Press the **ENTER** key to select this option. Press the ▲ or ▼ keys to move the highlight to a menu item and then press the **ENTER** key to select that item.	• Picture mode • PIP / PBP • Display mode • Volume • Mute • Brightness • Contrast • Super Resolution • Smart Focus
DDC/CI*	Allows the monitor settings to be set through the software on the PC.	Press the **ENTER** key to select this option. Press the ▲ or ▼ keys to change the settings.	• ON • OFF

Downloaded from ManualMonitor.com Manuals

CEC (EW2730V only)	When activated and the monitor is connected to a multimedia device supporting CEC feature through HDMI, the device's remote control can be used to turn on the device and the monitor simultaneously. If the monitor is switched off, the device is off as well. ☞ Synchronization with other devices through HDMI CEC may be available but not guaranteed.	Press the **ENTER** key to select this option. Press the ▲ or ▼ keys to change the settings.	• ON • OFF
Source Auto Search	When this function is activated, HDMI and Component ports will be in the input auto select loop. Otherwise, these sources can only be selected by input select or by hot key.	Press the **ENTER** key to select this option. Press the ▲ or ▼ keys to change the settings.	• ON • OFF
Auto Power Off	Sets the time to power off the monitor automatically in power saving mode.	Press the **ENTER** key to select this option. Press the ▲ or ▼ keys to change the settings.	• OFF • 10min. • 20min. • 30min.
Information	Displays the current monitor property settings.		• Input • Current Resolution • Optimum Resolution (best with the monitor) • PIP/PBP Status • PIP/PBP Source • PIP/PBP Resolution • Model Name
Reset All	Resets all mode, color and geometry settings to the factory default values.	Press the ▲ or ▼ keys to change the settings.	• YES • NO

*DDC/CI, short for Display Data Channel/Command Interface, which was developed by Video Electronics Standards Association (VESA). DDC/CI capability allows monitor controls to be sent via the software for remote diagnostics.

Downloaded from ManualMonitor.com Manuals

8. Troubleshooting

Frequently asked questions (FAQ)

? The image is blurred:

☞Read the instructions on the link "**Adjusting the Screen Resolution**" on the CD, and then select the correct resolution, refresh rate and make adjustments based on these instructions.

? How do you use a VGA extension cable?

☞Remove the extension cable for the test. Is the image now in focus? If not, optimize the image by working through the instructions in the "**Adjusting the refresh rate**" section on the link "**Adjusting the Screen Resolution**". It is normal for blurring to occur due to conduction losses in extension cables. You can minimize these losses by using an extension cable with better conduction quality or with a built-in booster.

? Does the blurring only occur at resolutions lower than the native (maximum) resolution?

☞Read the instructions on the link "**Adjusting the Screen Resolution**" on the CD. Select the native resolution.

? Pixel errors can be seen:

☞One of several pixels is permanently black, one or more pixels are permanently white, one or more pixels are permanently red, green, blue or another color.

- Clean the LCD screen.
- Cycle power on-off.
- These are pixels that are permanently on or off and is a natural defect that occurs in LCD technology.

? The image has a faulty coloration:

☞It has a yellow, blue or pink appearance.

Select MENU > PICTURE > Color > Reset Color, and then choose “YES” in the “Caution” message box to reset the color settings to the factory defaults.

If the image is still not correct and the OSD also has faulty coloration, this means one of the three primary colors is missing in the signal input. Now check the signal cable connectors. If any pin is bent or broken off, please contact your dealer to get necessary support.

? No image can be seen:

☞Is the prompt on the display illuminated in green?

If the LED is illuminated in green and there is a message “Out of Range” on the screen, this means you are using a display mode that this monitor does not support, please change the setting to one of the supported mode. Please read the “**Preset display modes**” section from the link "**Adjusting the Screen Resolution**".

? Faint shadow from the static image displayed is visible on the screen:

☞
- Activate the power management function to let your computer and monitor go into a low power "sleep" mode when not actively in use.
- Use a screensaver to prevent the occurrence of image retention.

Downloaded from ManualMonitor.com Manuals

Is the prompt on the display illuminated in orange?

If the LED is illuminated in orange, the power management mode is active. Press any button on the computer keyboard or move the mouse. If that does not help, check the signal cable connectors. If any pin is bent or broken off, please contact your dealer to get necessary support.

Is the prompt on the display not illuminated at all?

Check the power supply mains socket, the external power supply and the mains switch.

The image is distorted, flashes or flickers:

Read the instructions on the link "**Adjusting the Screen Resolution**" on the CD, and then select the correct resolution, refresh rate and make adjustments based on these instructions.

You are running the monitor at its native resolution, but the image is still distorted.

Images from different input sources may appear distorted or stretched on the monitor running at its native resolution. To have the optimal display performance of each type of input sources, you can use the "Display Mode" function to set a proper aspect ratio for the input sources. See Display Mode on page 32 for details.

The image is displaced in one direction:

Read the instructions on the link "**Adjusting the Screen Resolution**" on the CD, and then select the correct resolution, refresh rate and make adjustments based on these instructions.

The OSD controls are inaccessible:

- To unlock the OSD controls when the OSD is preset to be locked, press and hold the “MENU” key for 15 seconds to enter the “OSD Lock” option and make changes.
- Alternatively, you may use the ▲ or ▼ keys to select “NO” in the “OSD Lock” submenu from the “OSD Settings” menu (under SYSTEM), and all OSD controls will be accessible.

No sound can be heard from the built-in speakers:

- Check whether the desired cable to input audio signals is properly connected. See To Input Audio Signals on page 12 for details.
- Increase the volume (volume may be muted or too low).
- Remove your headphone and/or external speakers. (If they are connected to the monitor, the built-in speakers are automatically muted.)

No sound can be heard from the connected external speakers:

- Remove your headphone (if the headphone is connected to the monitor).
- Check whether Line Out is properly connected.
- If the external speakers are USB-powered, check whether the USB connection is OK.
- Increase the volume (volume may be muted or too low) on the external speakers.

Sound cannot be muted:

- Restart your computer.
- Update the graphics and/or audio driver.

Downloaded from ManualMonitor.com Manuals

USB devices are not working:

- Check whether upstream and downstream USB are properly connected.
- Install a corresponding USB device driver if available.

Need more help?

If your problems remain after checking this manual, please contact your place of purchase or e-mail us at: Support@BenQ.com.

Downloaded from ManualMonitor.com Manuals